
HUMON


Humidifier side selection


If looking at the humidifier door, the air flow is from right to left, the humidifier is left inspection side, the air flow is from left to right, the humidifier is right inspection side


Left inspection side WFL

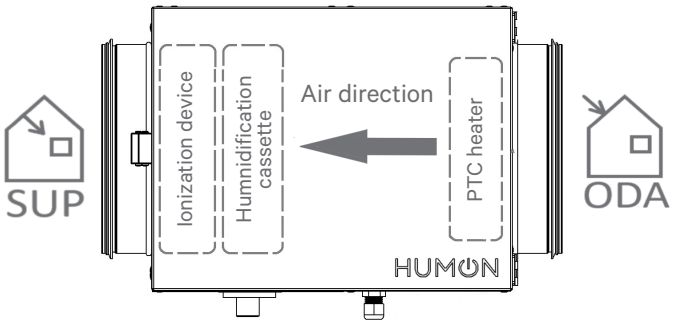

Right inspection side WFR

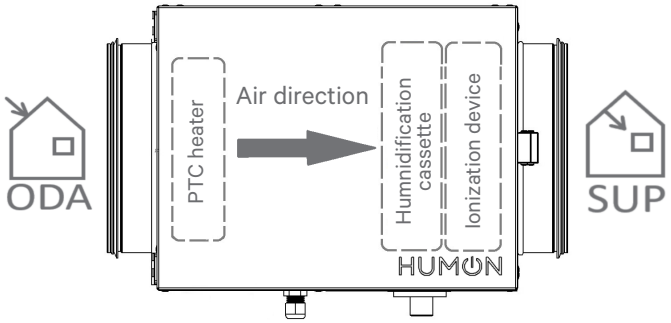

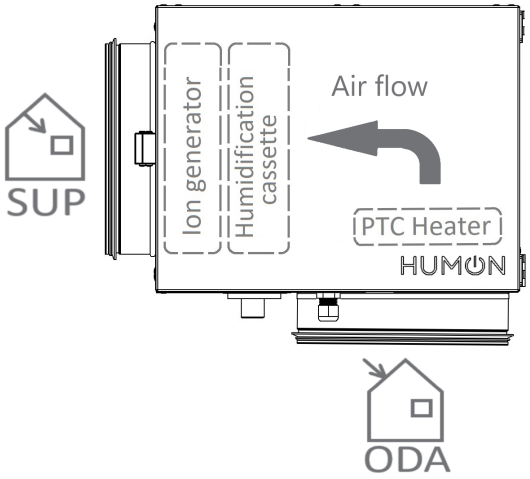

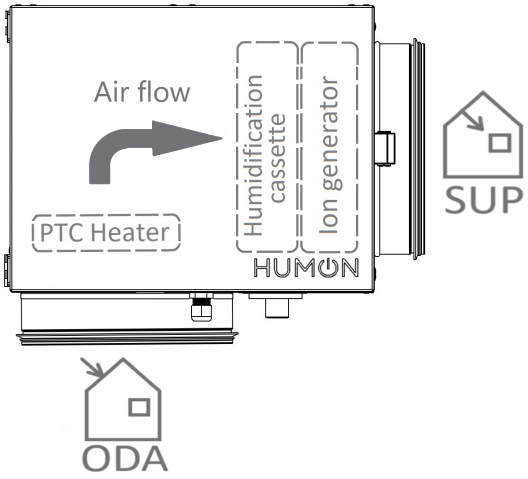

Vilniaus str. 36K1, LT-14200, Putiniskiu Vill.,
Suderves eld., Vilnius dist., Lithuania

info@humon.lt

www.humon.lt